



ICARUS Omnia (G2) (M701BK)

User Manual

Copyright © 2012 ICARUS

Table of contents

Disclaimer	5
Introduction	5
Inside the box	
Parts and controls	
Turning on/and off	
Charging	
Inserting a memory card	
The Home menu	
Importing and transferring content	12
Importing content	
Importing DRM content	
Authorization	
Transferring DRM ebooks	
Reading books	15
Opening books	
Book page interface	
Turning a page	
Adjusting font size	

Zooming in/out

Using the Option menu while reading

Adding bookmarks

Deleting bookmarks

Opening bookmarks in the Home menu

Opening bookmarks in the current book

Go to page

Auto flip

Book information

Screen rotation

Display settings

Add to favorites

Playing music 22

Music player

Playing video 24

Using the Option menu during video playback

Viewing pictures 26

Zooming in/out

Slideshow

Thumbnail view

File explorer	27
Copy-paste files	
Deleting files	
Settings	28
Time and date	
Standby	
Format memory	
About product	
Power management	
Restore factory defaults	
Language	
Screen rotation	
Manual	
Troubleshooting	30
Precaution and maintenance	31
Technical specifications	33

Disclaimer

All the information, design and specifications contained in this manual were correct at the time of publication. However, as the product is under development and upgrading, the final device may have a slightly difference in appearance or modified functionality than presented in this manual.


Introduction

The ICARUS Omnia is an ebook reader with full color display screen. It supports many ebook formats, including content encrypted with Adobe DRM. The Omnia is more than an e-reader though! You can also use it to listen to music, view your pictures or watch movies.

Inside the box

1. **ICARUS Omnia M701BK LCD e-reader**
2. **USB cable**
3. **Quick start guide**

Parts and Controls

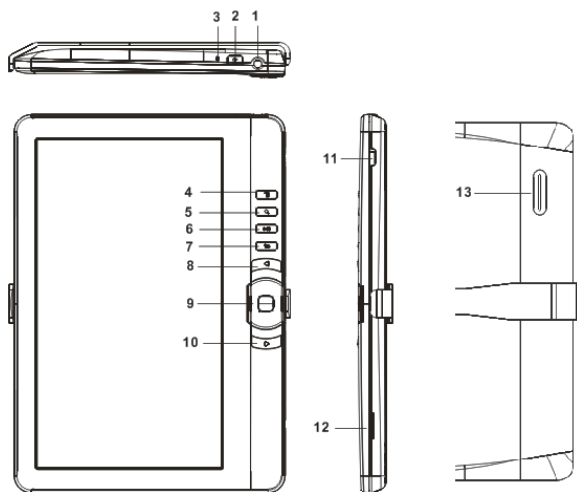

- 1 Headphone jack** – to insert head/earphones
- 2 Power button** - press and hold for 3 second to turn on/off, press and hold 6 seconds to reset
- 3 LED indicator** – shows charging status
- 4 Menu button** – to open the pop-up menu
- 5 Zoom button** – press to adjust font size or to zoom in/out
- 6 Play/pause button** – to start/pause playback
- 7 Back buttons** – to go back one menu / step
- 8 Previous page button** – to go the previous page
- 9 Joystick / navigation keys** – to navigate the menus
- 10 Next page button** – to go to the next page
- 11 Micro USB port** – to connect to a computer/charger

- 12 Micro SD card slot** – insert micro SD memory cards here for additional storage space
- 13 Speaker** – do not block this area during music playing

Turning on and off

Press and hold the [Power] button for 3 seconds to turn on the Omnia.

- It may take a few moments for the Omnia to turn on and loading the content.
- If the Omnia does not turn on, charging is required.
- To turn off the Omnia, press and hold [Power] button for 3 seconds.

Charging

You need to charge the the Omnia prior to using it for the first time or when battery power is low.

- Charge the Omnia using the USB cable by connecting it to a computer or the optional ICARUS AC USB charger.
- Please turn the Omnia to standby mode to shorten the charging process.
- It will take about 6 hours to fully charger the Omnia in standby mode (LCD off)
- When the Omnia is charging, it will enter into standby mode after remains idle for 60 s. Press the [Power] button to wake up the Omnia.
- The battery status is displayed at the bottom left corner.




Inserting a Memory Card

The Omnia supports Micro SD cards in both FAT and NTFS file system. NTFS is needed to copy file with size larger than 4GB.

To insert a Memory card:

- Check that the micro SD card is in the correct position with the contact pin facing upwards as illustrated below. You may damage the card and the Omnia if the micro SD card is not inserted in correct position.

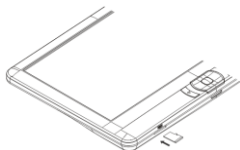


- Push the micro SD card into the card slot until it clicks.
- To remove the SD card, push the micro SD card once again until it clicks.
- When a micro SD card is inserted in or ejected from the Omnia, it may take few seconds for the Omnia to update the content.
- Please avoid inserting or ejecting an SD card when other operations are running as this may cause the system to hang.
- Do Not remove the card if the content inside the card is being played. This will halt the operation of the Omnia and cause the Omnia to restart.
- If the system is not responding, press and hold the <Power> button for 6 seconds to reset and turn it off.

Limitations of the NTFS file system:

- Books in the card are not recognized by ADE when connected to PC.
- Direct copying of files from the internal memory to the memory card is not supported.

The Home menu

When the Omnia is turned on, you will enter into the Home Menu.

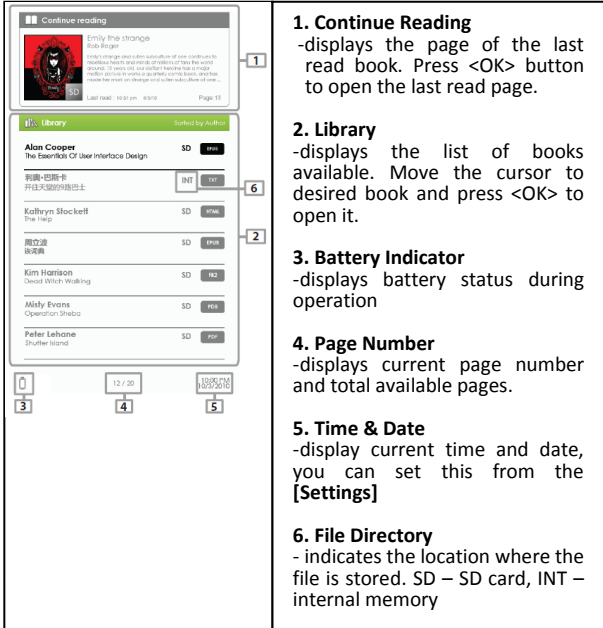

Press the directional key to move cursor to desired item. Selected item will be highlighted in dark. Press <OK> to enter.

To exit from Option menu, move cursor to  and press <OK> to confirm.

Alternatively, press the <Return> button to exit.

The other options available in the Option menu are:



To sort books by different categories: Title, Author, Date, Format



To jump to a specific page



To read from previously added bookmarks




To adjust the brightness of the display screen




To open the Video Player



To open the Music Player



To open the Photo Viewer



To open the File Explorer for advanced file management



To adjust System settings and to read the user manual



To open your favorite book list.

Importing and transferring content

Importing Content


- The Omnia supports the USB Mass Storage Device function.
- To import contents (ebooks, video, audio, photo etc) into the Omnia, connect the Omnia to PC via the supplied USB cable.
- Upon successful connection to PC, the Omnia will enter USB mode and all operation will be halted.
- Go to [My Computer], double click on the Omnia's disk to open.
- Perform normal file management operation like other USB device.

Importing DRM Content

The Omnia supports Adobe DRM contents. Adobe Digital Editions (ADE) is required.

Installing Adobe Digital Editions (ADE)


- ADE is a free program by Adobe that is necessary for transferring DRM protected content from your computer to an e-reader
- You can download the installer from <http://www.adobe.com/products/digitaleditions/#fp>.
- For first time user, you will need to get a free adobe ID from adobe website. Click on the [get an Adobe ID online] link as illustrated:

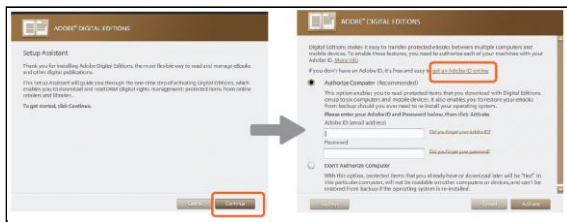

- Enter your email address and complete the online form as per instructed.

Authorization

- Upon registration, return to the ADE window. Enter the username and password to activate your Adobe account.
- After activation, connect the Omnia to PC. ADE will detect the Omnia and you are prompted to authorize device.
- After authorization, you will be able to find the Omnia recognized in ADE as below. Contents inside the Omnia will be displayed on the right hand windows.

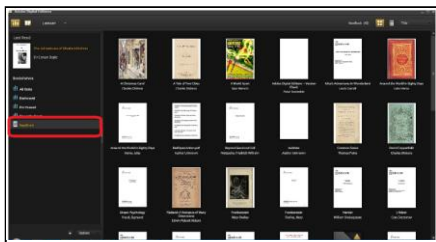

- You can now start downloading or buying ebooks from online Ebook stores supporting Adobe DRM.
- Purchased or downloaded ebooks will be stored in [My Digital Editions] in [My Documents].

Transferring DRM ebooks

- From ADE menu, click on [All Items] on the left hand column
- Items in [My Digital Editions] will be listed down in right window.
- Select the desired item(s) to be transferred, <Shift> + <Left Click> to select multiple files.
- Drag and drop the selected item(s) into the Omnia's Drive located on the last row of the left side column as illustrated below.



Notes on using Adobe Digital Editions (ADE)

Each ADE ID supports only 6 devices, this includes the master device (the Omnia) and the slave device (SD card).

When the Omnia is restored to default settings, ALL DRM activation record and data (including DRM books purchased) will be erased from the Omnia. You are required to authorize the device with your ADE ID again.

When the number of authorized device has exceeded the allowable amount, you will come across the following error message:




To request for extension and reset of your ADE ID, go to <http://www.adobe.com/support/digitaleditions/> → [Submit a web case]. You are required to key in your ADE ID info.

Reading books

Opening Books

- Books transferred to Omnia will be listed in Home Menu.
- Omnia supports ebooks in epub, pdf, and txt format.
- Use the <Directional> buttons to move the cursor to select book and press <OK> to open.

Book Page Interface

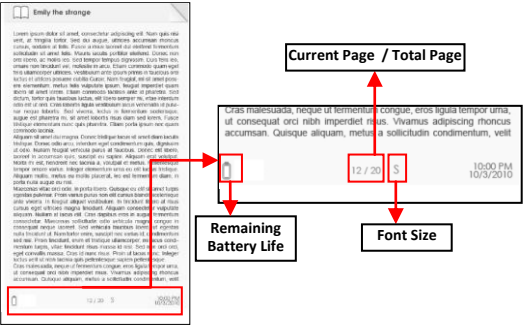

Turning a page

While reading a book, press the <Next Page> or <Directional-Right> button to turn to next page. To turn to previous page, press <Previous Page> or <Directional-Left> button.

Adjusting Font Size

- While reading, press the <Zoom> button to enter the font size menu.
- There a 5 font sizes available:
Small, Medium, Large, XLarge, XXLLarge.
- Move the cursor to the desired font size then press <OK> to confirm.
- It may take some time for the fonts to be resized.



Zooming In/Out

- You will need to use zooming function to enlarge images available in the ebook (epud & pdf file)
- From the size menu, select [Enlarge]
- The Zoom menu will appear.



- Move the cursor to the desired zoom level and press <OK>.
- In zoom mode, use <Directional> buttons to pan across the zoomed page.
- Page turning is disabled in zoom mode.
- Press <Return> to exit the zoom mode and return to the original size and resume normal book reading functions.

Using the Option Menu while Reading

While reading, press the <Menu> button to enter the Option Menu.

Options available:

1. Add / Delete Bookmark
2. Bookmarks
3. Go to Page
4. Music
5. Auto flip
6. Book Information
7. Rotate
8. Display Settings
9. Add to Favorite



Adding a Bookmark

When reading, turn to the desired page that you would like to bookmark. Press the <Menu> button, move the cursor to [Add Bookmark] and then press <OK>.

Deleting a Bookmark


- Turn to the bookmarked page that needs to be deleted. Press <Menu> and move the cursor to <Delete Bookmark>. Press <OK> to confirm.
- Alternatively, you can delete a bookmark from the Bookmark List.
- In the Bookmark list, press <Menu> and select [Delete] to delete selected bookmark.

Opening bookmarks in the Home Menu

- From Home Menu, press <Menu> and select [Bookmarks] to enter Bookmark List.

Upper window displays a quick preview of the selected book.

Lower window displays the list of books with bookmarks. Press <OK> on the desired book to view the available bookmark list.

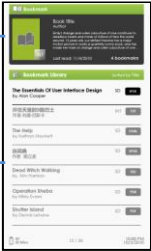

- In the Bookmark List, move the cursor to the desired bookmark, press <OK> to open.
- To delete a bookmark from the Bookmark List, press <Menu> to display the [Option Menu] and select [Delete] to confirm.

Opening a bookmark in the Current Book

- While reading the book, press <Menu> and select [Bookmarks] to enter into Bookmark List.
- In the Bookmark List, move the cursor to the desired page and press <OK> to open.
- To delete a bookmark from the Bookmark List, Press <Menu> to display the Option Menu and select [Delete] to confirm.

Go to Page

You can jump to pages using the [Go to Page] option.
In the Option Menu, select [Go to Page].



In Go to Page menu, move the cursor by the <Directional-Left/Right> button. Input the page number by <Directional –Up/Down> button. Move the cursor to [Apply] then <OK> to apply settings.

Auto Flip

You can set the Omnia to [Auto Flip] mode. In this mode the book automatically turns pages in set time intervals. The auto flip duration available are: 10s, 20s, 30s, 40s, 50s, 1 min.

Book Information

You can check the information of the current book from the [Book Information] option. This will show (when saved in the original content of the book by the publisher):

Title, Author, Publisher, File Type, Date added, File size, Publisher and Expiration.


Depending on the source of ebook that you download/purchase, some of the information may not be available.

Screen Rotation

The [Rotate] option allows you to rotate the display orientation 90° in clock wise direction to landscape orientation.

- To return to original orientation, press <Menu> and enter <Rotate> once again.
- The Omnia contains a G sensor, simply rotate the Omnia in clock wise direction to rotate the viewing orientation.

- In landscape view, the Option Menu is divided into 2 pages. To access options in the second page, move the cursor to [More>] icon at the top right corner of the Option Menu and then enter
- To return to previous page, move the cursor to [< Back] and then enter

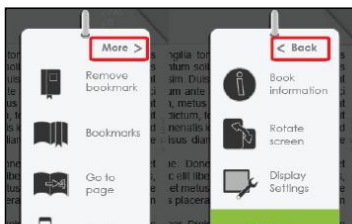

Display Settings

- To adjust font color, background color, brightness during reading.
- Change of font color and background color are only applicable to txt and epub documents.

Add to Favorite

- You can add books to your Favorite List. In Option menu, move the cursor to [Add to Favorite] to add current book into Favorite List.
- To view books in Favorite List, from Home Menu, press <Menu> button and select [Favorite].

- To remove books from the Favorites:
 1. Enter the Favorite List from the Home menu. Move the cursor to the desired book title. Press <Menu> button and select [Delete] from the dropdown list.
 2. While reading a book, press the <Menu> button and select [Remove from Favorite] from the Option Menu.

Playing music

Music Player

- In the Home Menu, press <Menu> to display the Option Menu.
- Move the cursor to [Music] and press <OK> to confirm.



- In the Music player, press <OK> to play/pause music playing
- Press <Directional Right> to play next song, press and hold to Fast Forward
- Press <Directional Left> to play previous song, Press and hold to Fast Rewind
- Press <Directional Up> to increase volume
- Press <Directional Down> to decrease volume

Using the Option Menu in the Music Player

	Normal	EQ settings – move the cursor to [EQ Settings] , press [Left] or [Right] button to select desired EQ mode.
	Loop	Play Mode - move the cursor to [Play Mode] , press [Left] or [Right] button to select desired Play mode
	Sort by all song	To view all stored audio files
	Sort by genre	To sort audio files by genre
	Sort by album	To sort audio files by album
	Sort by artist	To sort audio files by artist

Playing video

- From the Home Menu, open the Option menu and select 'Video' to enter into the video library.
- In the video library move the cursor to your desired video file and press <OK> to start playing.
- During video playback, the button definition is as below:


	1	Enter / Exit Full Screen mode
	2	Increase Volume
	3	Decrease Volume
	4	Previous video / Fast Rewind
	5	Next Video / Fast Forward
	6	Play / Pause

Using the Option Menu during Video Playback

During video playback, press <Menu> button to display Option Menu.

Press <Left>/<Right> button to switch between [Loop] & [Repeat]
Loop: to play all video files available in the list.
Repeat: repeats the current video

Press <OK> button to enter [Full Screen] or [Fit to screen]

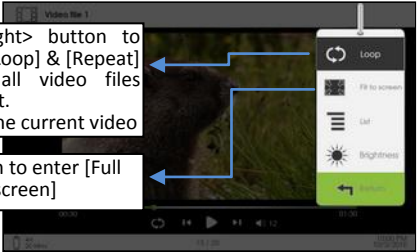

To Display Subtitles during Video Playback

- The Omnia supports subtitle of sub, ssa, srt, lrc format.
- The file name of the subtitle must be identical to that of the video file. The subtitle will be loaded automatically during video playback.

Viewing pictures

Gentle Reminder: Please organize the pictures into a specific folder for the ease of navigation.

- From the Home Menu, press <Menu> to display Option Menu.
- Move the cursor to [Photo] and press <OK> to confirm.

Upper window displays a quick preview of the selected photo

Lower window displays the file list in the reader.



- Use the <Directional> buttons to navigate through the files/folders.
- Press <OK> on the selected photo to view a full screen display.
- In full screen mode, press <Directional Left/Right> to view previous and next picture.

Zoom In/Out Picture

- There are 3 zoom levels available. To zoom in while in full screen mode, press the <Zoom> button to change different zoom level.
- To return to original size, press the <Return> button to resume normal operation.

Slideshow

- In full screen mode, press <Menu> → [Slideshow] to start.
- To stop slideshow, press <Menu> button once.
- From the drop down menu, select [Slide Time] to adjust slideshow duration.

Thumbnail view

- In full screen mode, press <Menu> → [Thumbnail] to view pictures in thumbnail mode.
- To exit thumbnail view, press <Menu> once to return to full screen mode.

File explorer

- From the Home menu, press <Menu> → [Explorer]
- Press <Left> / <Right> to select Internal / SD card memory and press [OK] to enter.
- Press <Return> to exit from current directory and the cursor will move to the top for memory selection.

Copy / Paste files

- You can copy files/folders from SD card to the internal memory and vice versa.
- From the file list, move the cursor to the desired file to copy. Click <Menu> and select [Copy].
- From the explorer, go to the desired directory to store the copied file. Click <Menu> and select [Paste] to start copying files into the new directory/folder.

Note: it may take longer time to paste files/folder with big file size.

Deleting Files

From the explorer, move the cursor to desired file to delete. Press [Menu] and select [Delete] to start deleting file.

Note: it may take longer time to delete files/folder with big file size and quantity.

Settings

Time & Date

To set the clock and date, press the <Directional Left/Right> buttons to move the cursor.

Press the <Directional Up/Down> buttons to input value.

Time zone setting is needed to calculate the expiry duration for book borrowing / returning.

Device Standby

- To enable / disable auto standby mode.
- Press the <Power> button to manually set the Omnia to standby mode
- Press the <Power> button once to wake up the Omnia from standby mode.

Format Memory

To format internal memory and memory card.

All data will be lost. Please backup your data before performing this.

About Product

Displays product information of the Omnia.

Power Management

Displays real time battery status of the Omnia.

Restore Factory Defaults

To restore the Omnia's settings to defaults.

All settings will be restored. All DRM contents and activation will be deleted. You are required to authorize the Omnia again through ADE (Adobe Digital Editions) after the system is restored.

Language

To set the system language of the Omnia.

Screen Rotation

To set screen rotation mode to auto or manual mode.

User's Manual

Opens the user manual on the Omnia.

Troubleshooting

If the Omnia does not function as it is expected, please try the following steps.

The Omnia is not responding or can't be turned on.

- Reset the Omnia by pressing and holding the power button for 6 seconds. The Omnia will be forced to shutdown if it is on and you are required to restart the Omnia again.
- Battery has been fully depleted. Please charge the Omnia via USB or the (optional) USB AC Adapter.

Battery Life seems short

- The operating temperature is below 5°C. this is due to the characteristics of battery and not a malfunction
- The battery is not used for prolonged period. Please recharge the battery of the Omnia again
- The battery is not fully charged. Please charge the Omnia for at least 4 hours.
- The battery needs to be replaced. Please consult the authorized dealer for service.

A Book cannot be read

- Copyright protected books cannot be read on any device other than the authorized one.
- Check if the book has expired.
- Check if the book format is supported by the Omnia.

The Omnia cannot be operated during USB connection

- The Omnia cannot be operated while it is connected to PC.

- Eject the Omnia from computer to resume operation.
- To use the Omnia while charging, click on the [Safely Remove Hardware] icon located on the left lower corner to disconnect data connection with computer. After the Omnia is safely removed, computer will only charge the Omnia and you can now resume normal operation.

Precautions and maintenance

On Battery

- Charge the battery only in temperature that ranges from 0 to 35 degree Celsius.
- Do not charge Omnia if the battery is found damaged or leaking.

On Operation

- Never subject the Omnia to extremes of light, temperature, moisture or vibration.
- Never wrap the Omnia in anything when it is being used or charged. Heat may build up in the Omnia while charging or if it used for an extended period of time.
- Do not use or store the Omnia in a location subject to:
 - A. Extreme high temperature, such as in a sun-heated car
 - B. Direct sunlight
 - C. High humidity or places with corrosive substances
 - D. Sub-zero condition, especially during winter

On the Headphone

- Listening to audio at high volume for extended periods of time can cause hearing damage. To avoid damage to your hearing, keep the volume at moderate level.
- Do not use headphones while driving, cycling or operating any motorized vehicles. It can also be potentially dangerous to play at a high volume while walking, especially at pedestrian crossings.

On Cleaning and Maintenance

- If the Omnia does get wet, turn it off immediately. Wait for it to dry completely before turning on again.
- Clean the screen with a soft cloth; be careful not to wipe it with anything abrasive. When carrying your Omnia in a bag, keep it in the protecting case supplied to avoid scratches
- If the Omnia needs service, please consult the authorized dealer through the contact information provided in the warranty card. Faulty service may void the warranty.

On Micro SD memory cards

- After inserting a micro SD card, if the Omnia does not respond, please take out and insert again.
- Do not remove a micro SD card or turn off the Omnia during data writing or reading to prevent damage to data and to the Omnia.
- Make sure the micro SD card is unlocked before writing or deleting data in the micro SD card.
- Backup your files and data before formatting the micro SD card. Please format the micro SD card in FAT.

Technical specifications

Display

7 inch TFT-LCD Display, 800x480 pixels
Brightness: 250cd/m²

Storage memory

Built in memory: 32GB
Supports TF card up to 16GB (FAT & NTFS format)

Media File Format supported

eBook: EPUB, PDF, TXT, FB2, PDB, HTML

Audio: MP3, WMA, AAC, WAV, OGG

Photo: jpg, bmp, gif

Video: MPEG-1, MPEG-2, MPEG-4(Xvid), Divx, H.263, H.264, RM/
RMVB, MKV, MOV, VOB, FLV, WMV 7 (v1), WMV 9(v3), WMV 9AP(vc-
1) up to HD 720p resolution

Connectivity

Data transfer: USB 2.0 High Speed

Audio: 3.5mm audio jack

Power: USB jack

Miscellaneous

Built in stereo speaker

G Sensor

Clock / Date

Real time battery indication

Battery life

Reading – up to 8 hours

Music – up to 40 hours (with backlight off)

Ebook + Music-up to 7 hours

Video- up to 7 hours

Charging

Power: DC 5.0V, 1.2A

Duration: 6 hours (approx)

Minimum system requirement (USB Mass Storage)

Windows 98, 2K, XP, Vista, Win 7, Mac OS 10x, Linux

Physical properties

Dimension: 187.4 x 128.5 x 11.8 mm (approx)

Weight: 280g (approx)

*****Design and specifications are subject to change without prior notice.***

Copyrights and Trademark Notice

Copyright laws prohibit copying the data of this product or the contents of this manual (illustrations, related documents, etc.) in whole or in part without the permission of the copyright holder. Additionally, use of the data of this product or the contents of this manual is not allowed without ICARUS' permission except for personal use.

Microsoft, Windows, Windows Vista and Windows Media are trademarks or registered trademarks of Microsoft Corporation in the United States and / or other countries.

Macintosh and Mac OS are trademarks of Apple Inc., registered in the U.S. and other countries.

Adobe, the Adobe logo, Omnia and PDF are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

The Omnia contains Adobe® Reader® Mobile software under license from Adobe Systems Incorporated, Copyright © 1995-2009 Adobe Systems Incorporated. All rights reserved. Adobe and Reader are trademarks of Adobe Systems Incorporated.

© 2011 ICARUS Reader

